


MyBar.io

3. Case assembly

Written By: MyBar.io





Step 1 — Mounting right side (Components)

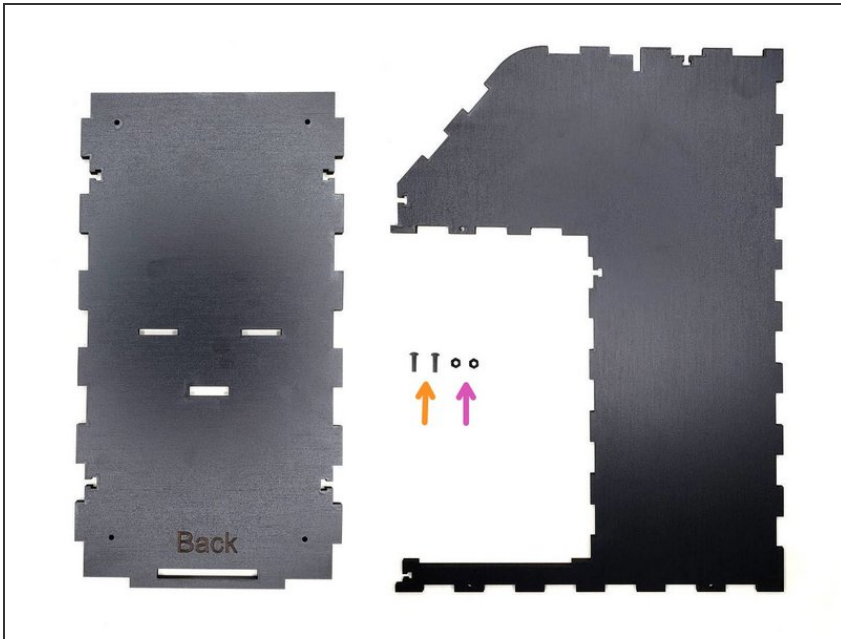

- Base
- Right side panel
- Screws M3 10mm (Black) (2x)
- M3 Nuts (2x)

Step 2 — Mounting right side

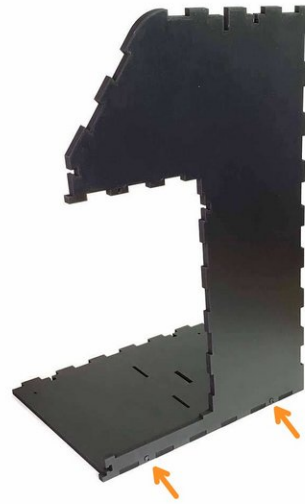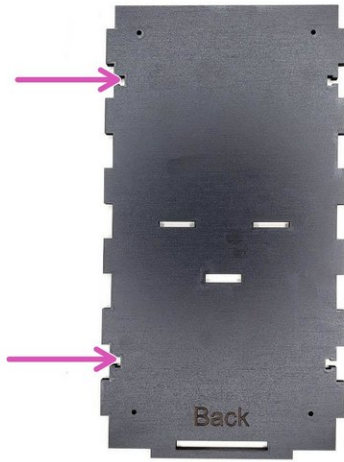


- Take the base and insert two M3 nuts.
- ⓘ In case you can't press the nuts in, don't use excessive force. Rotate the nut until it falls in place.
- Connect the base with the right side panel.
- Insert the M3 10mm screws through both holes in the right side. Start tightening until you reach the M3 nut. Tighten both screws all the way.

Step 3 — Mounting left side (components)



- Left side panel
- Screws M3 10mm (Black) (2x)
- M3 Nuts (2x)

Step 4 — Mounting left side

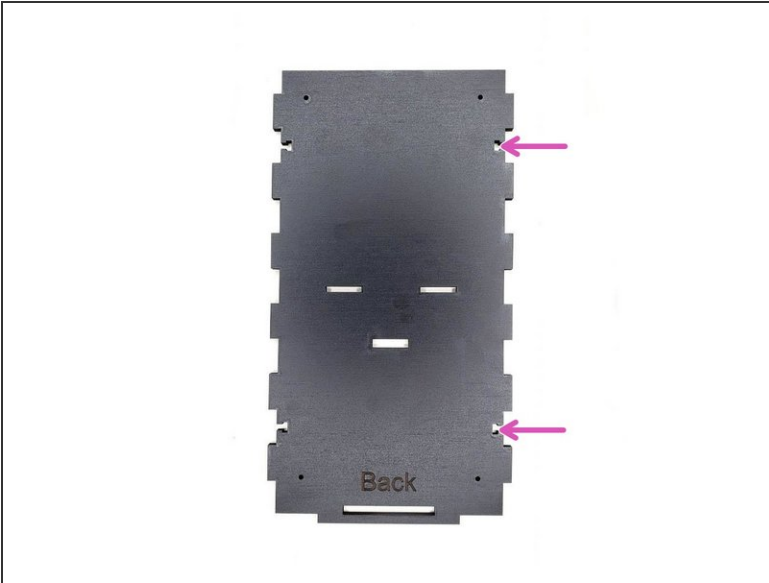


- Take the base and insert two M3 nuts.
- ⓘ In case you can't press the nuts in, don't use excessive force. Rotate the nut until it falls in place.
- Connect the base with the left side panel.
- Insert the M3 10mm screws through both holes in the right side. Start tightening until you reach the M3 nut. Tighten both screws all the way.

Step 5 — Mounting bottom front panel (components)



- Bottom front panel
- Screws M3 10mm (Black) (2x)
- M3 Nuts (2x)

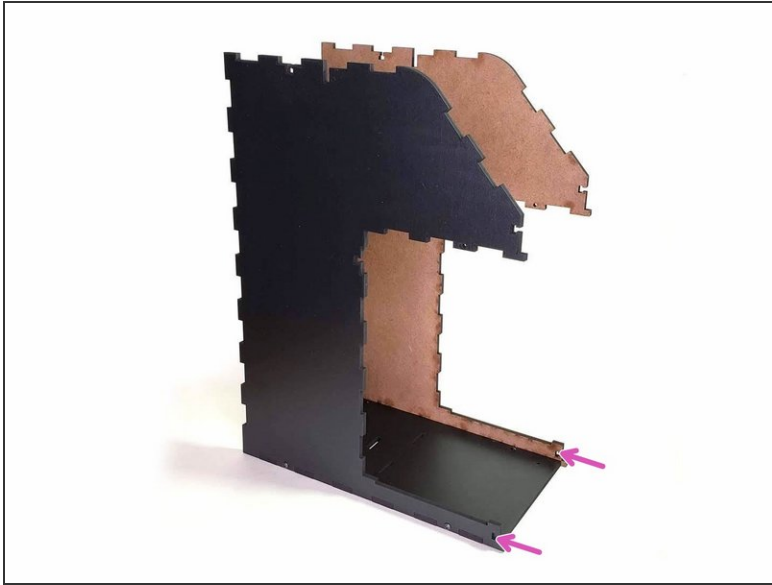Step 6 — Mounting bottom front panel


- Take the left side panel and the right side panel and insert the two M3 nuts.
- ⓘ In case you can't press the nuts in, don't use excessive force. Rotate the nut until it falls in place.
- Connect the left side panel and the right side panel with the bottom front panel.
- Insert the M3 10mm screws through both holes in the right side. Start tightening until you reach the M3 nut. Tighten both screws all the way.

Step 7 — Mounting top front panel (components)



- Top front panel
- Screws M3 10mm (Black) (2x)
- M3 Nuts (2x)

Step 8 — Mounting top front panel

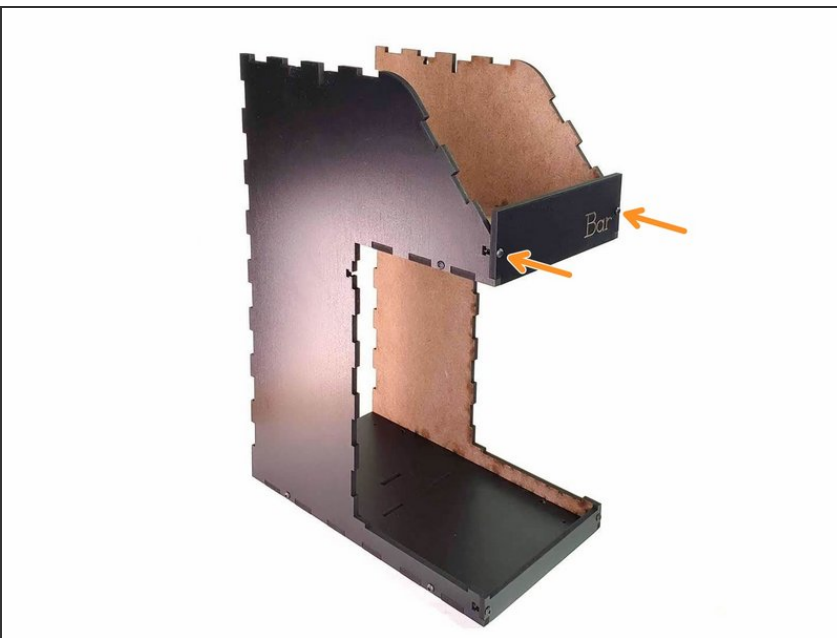

- Take the left side panel and the right side panel and insert the two M3 nuts.
- *i* In case you can't press the nuts in, don't use excessive force. Rotate the nut until it falls in place.
- Connect the left side panel and the right side panel with the top front panel.
- Insert the M3 10mm screws through both holes in the right side. Start tightening until you reach the M3 nut. Tighten both screws all the way.

Step 9 — This step is finished!

- This step is done, great job!
- Ready for more? Lets move to [4. Distance sensor and Rubber Pads](#)